

VICTORIA HILL - CARLYLE

PENTHOUSE UNITS ON 27TH FLOOR

UNITS 2701 – 2706

CONTROL4 AUTOMATED LIGHTING

DIMMER

(NOTE: Has a notch on the Top Button)



Single Tap on the Top Button turns the Light On

Single Tap on the Bottom Button turns the Light Off

Press and Hold the Top Button ramps the light to 100% over 5 seconds

Press and Hold the Bottom Button ramps the light to 0% over 5 seconds

SWICH



Basic On/Off switch

Tap the Top Button to turn On the Light

Tap the Bottom Button to turn Off the Light

2-BUTTON KEYPAD



Used in a 3-way Lighting scenario

Top and Bottom buttons are Linked to the main switch or Dimmer

When Linked to a Dimmer, buttons will act as a Dimmer

When Linked to a Switch, buttons will act as a Switch

6-BUTTON KEYPAD




6 Individual buttons that can be programmed

Can be programmed for Lighting control

Can be programmed for Music control

Can be Programmed for Scenes with music and lighting

CURRENT CONFIGURATION

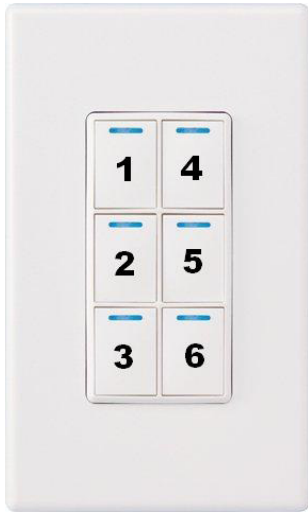

Button 1 <i>SCENE 1</i>	Button 4 <i>SCENE 2</i>
Button 2 <i>MOOD 1</i>	Button 5 <i>MOOD 2</i>
Button 3 <i>ALL ON</i>	Button 6 <i>ALL OFF</i>

LIGHTING SCENES

	ENTRANCE	KITCHEN POTS	KITCHEN LIGHTS	KITCHEN COUNTER	DINING	TV LIGHT	TOP OUTLET SWITCH
<i>SCENE 1</i>	ON	ON	ON	ON	0%	OFF	OFF
<i>MOOD 1</i>	OFF	OFF	ON	ON	30%	OFF	OFF
<i>ALL ON</i>	ON	ON	ON	ON	100%	ON	ON
<i>SCENE 2</i>	OFF	OFF	OFF	OFF	100%	ON	ON
<i>MOOD 2</i>	OFF	OFF	OFF	OFF	25%	ON	ON
<i>ALL OFF</i>	OFF	OFF	OFF	OFF	0%	OFF	OFF

ENTRANCE *SWITCH*

KITCHEN POTS *SWITCH*

KITCHEN LIGHTS *SWITCH*

KITCHEN COUNTER *SWITCH*

DINING *DIMMER*

TV LIGHT *SWITCH*

TOP OUTLET *SWITCH*