


Kindred Garburator Troubleshooting Tips

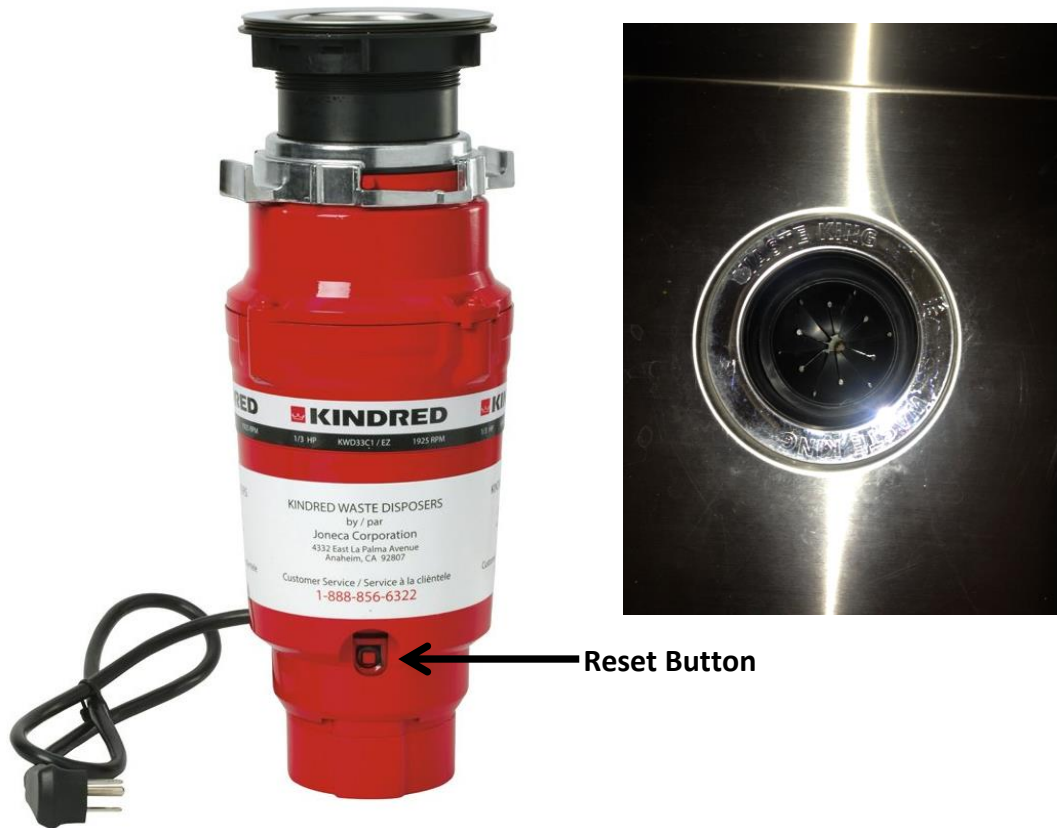

- Turn breaker off or unplug
 - Remove any all containments from inside
 - rotate the bottom turbine 1/2" by using a wooden spoon
 - hit the reset button on the bottom
 - plug back in or turn breaker back on
- Repeat steps until it works again

Please remember, your garbage disposal is for soft foods ONLY. Do not put any hard food wastes down the disposal unit such as bones, fruit pips/stones etc.

Thank you for your cooperation!



#300 – 550 Robson Street, Vancouver British Columbia, V6B 1C1
Tel (604) 602-7711 • Fax (604) 688-7907

www.onni.com